



CI-Keypad Installation Sheet



WARNING

The CI-Keypad is intended for use only when attached to the drive in the manner shown in this installation sheet. It is not suitable for handheld or remote use. Operation in any other fashion may cause a hazard, and invalidates the warranty.

Installing the CI-Keypad on the drive

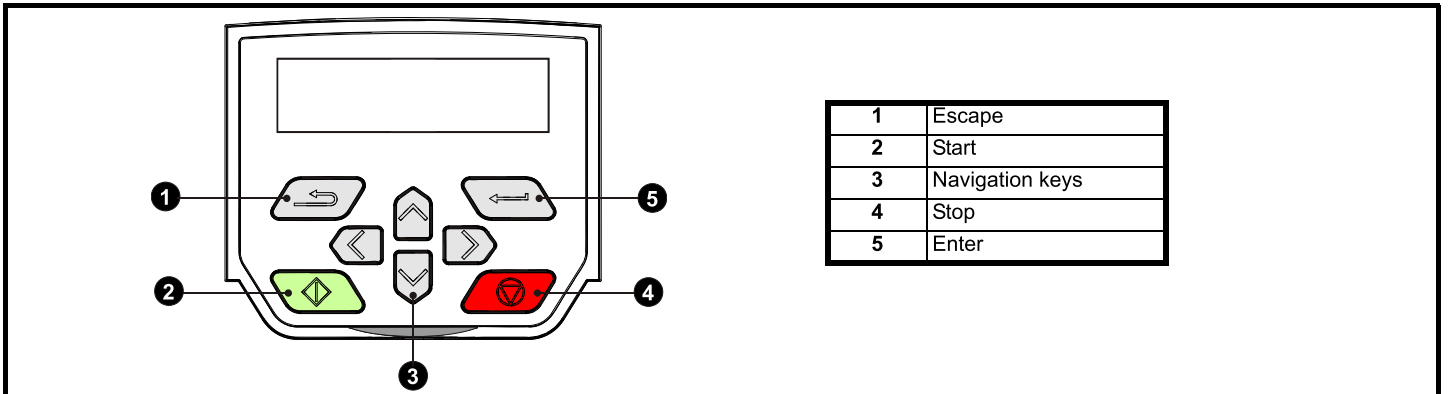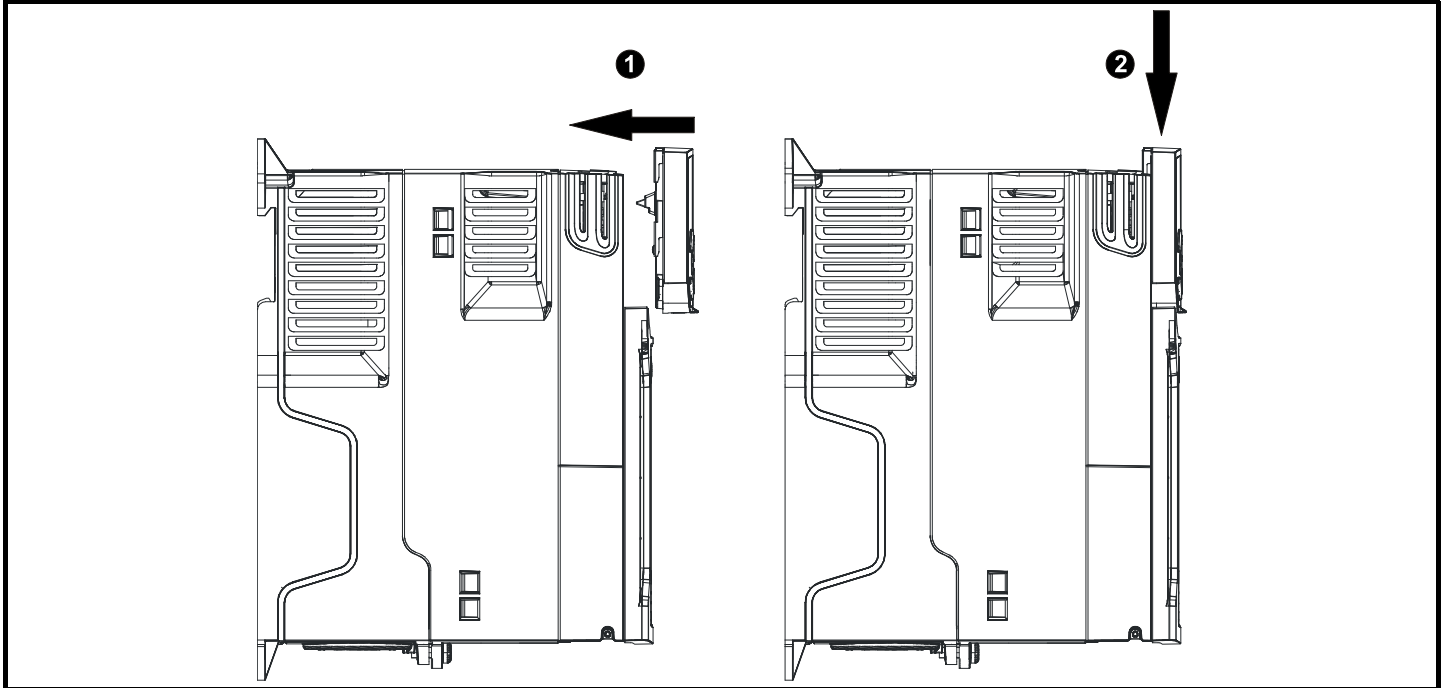

NOTE

The CI-Keypad can be installed / removed while the drive is powered up and running a motor, providing that the the drive is not operating in keypad mode.

NOTE

The red stop button  is also used to reset the drive.

NOTE

In ambient conditions above 50°C (122°F), the LCD keypad will display a blank screen. The LCD screen will recover as the ambient temperature reduces.

Control buttons

The keypad consists of:

Escape button (1) is used to exit from parameter edit or view mode. In parameter edit mode, if parameter values are edited and the exit button pressed the parameter value will be restored to the value it had on entry to edit mode.

The Start button (2) is used to control the drive if keypad mode is selected.

Navigation Keys (3) are used to navigate the parameter structure and change parameter values.

Stop Key (4) is used to stop or reset the drive.

Enter Key (5) is used to toggle between parameter edit and view mode.

Display

The CI-Keypad display provides up to four rows of text which show the drive status or the menu and parameter numbers currently being viewed.



0478-0049-03